

InstaShare Button

Wireless presenting

TZY31, TWY31



Agenda

- What is “InstaShare Button Mode”?
- Why do we need it?
- How to activate it?
- What’s the difference?

What is InstaShare Button mode?


What is InstaShare Button mode?

A dedicated signal source on the OSD for end users to select with ease.


1.



2.

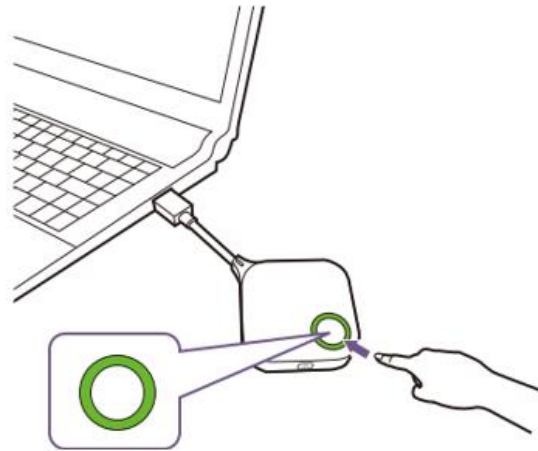

3.

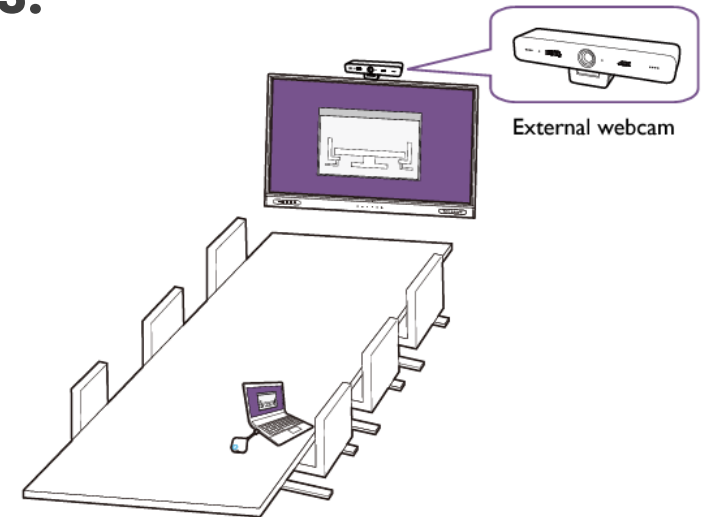


Support models: RP03 (Pro) and RM03* (Master) only, not for RE03 (Essential)

* Wait for FW OTA

Why do we need it?

Why do we need it?

- Improve the stability of the connection (main reason)
 - When you select the InstaShare Button as the signal source, the network setting will auto-switch to hotspot mode for a stable connection between the BenQ Board and the InstaShare Button.
 - Compare Wi-Fi mode, hotspot mode is much more stable and has less impact on the network environment.

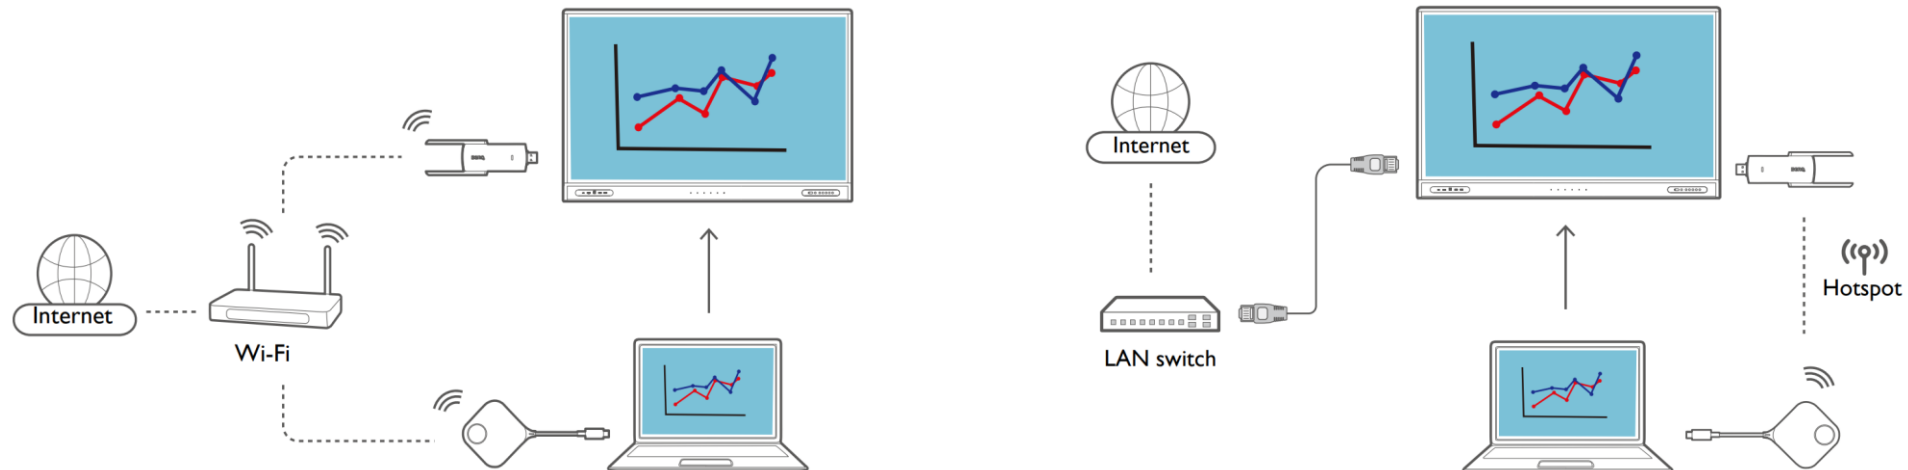

Why do we need it?


- Reduce the confusion of usage

- No need to worry about choosing which mode (Wi-Fi or Hotspot) to pair during the installation.
- No need to worry if the hotspot is turned off while you are using it.
- Easy and intuitive usage behaviors for end-users.


1.



2.

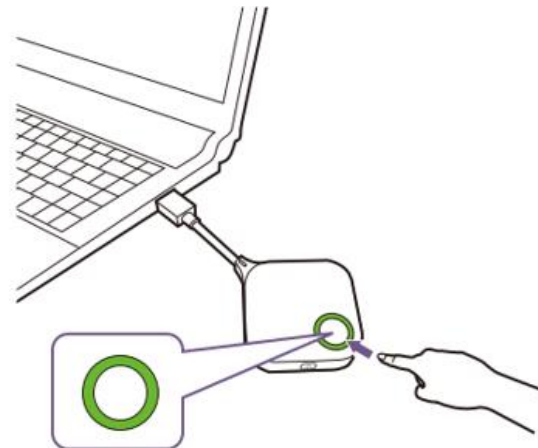

3.

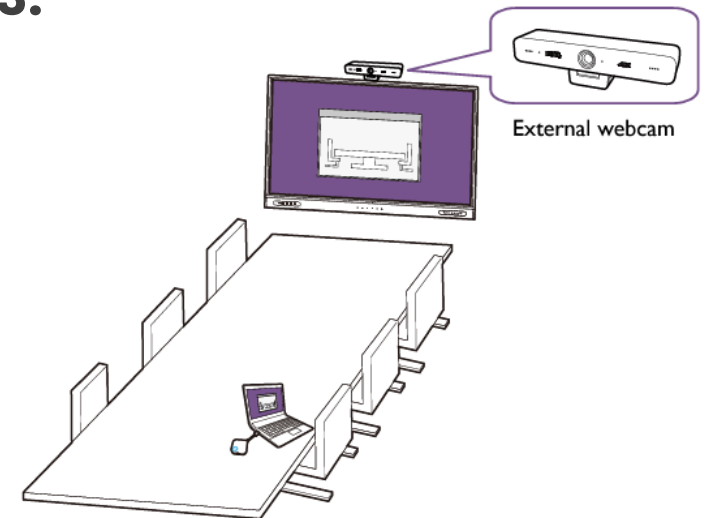

Why do we need it?


- Easy to maintain the FW of the Button
 - No extra software or tool is needed to update the FW of the Button.



How to activate it?


How to activate it?

1.

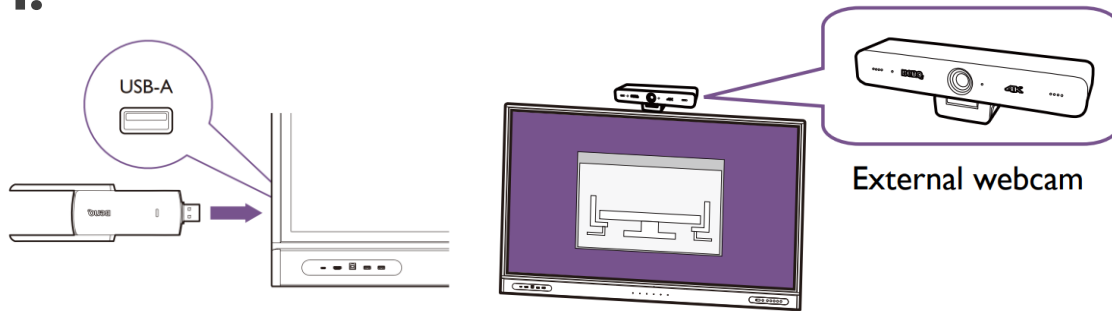

Make sure the wireless dongle and webcam (video conferencing) are connected

3.

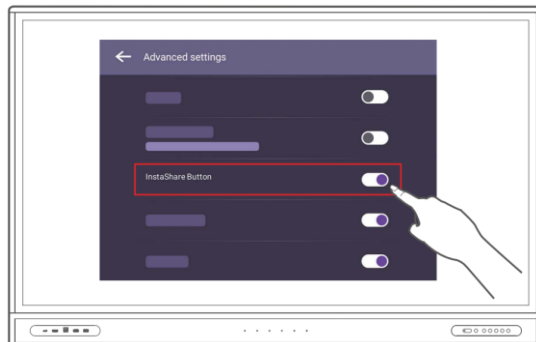


- Enable the InstaShare Button (Setting -> Advance settings)
- Tap **Restart**

2.



- Update the IFP FW and InstaShare 2 SW to the latest
- Download and install the **InstaShare Button app** in **BenQ Store**

4.

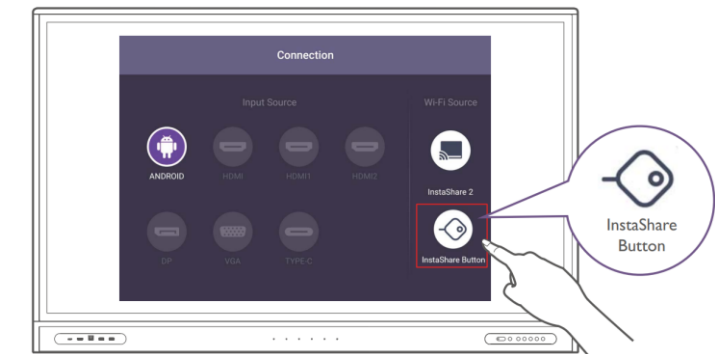

- Tap **InstaShare Button** as a source in the Connection

How to activate it?

5.



- Plug the InstaShare Button into the USB-C port
- Wait till the LED turns blue, and the Button **is paired**.


Note*




- Follow the instructions to update the FW if it's available.
- Re-plug the Button after the FW update is done.

What's the difference?


Before you enable the Button Mode?

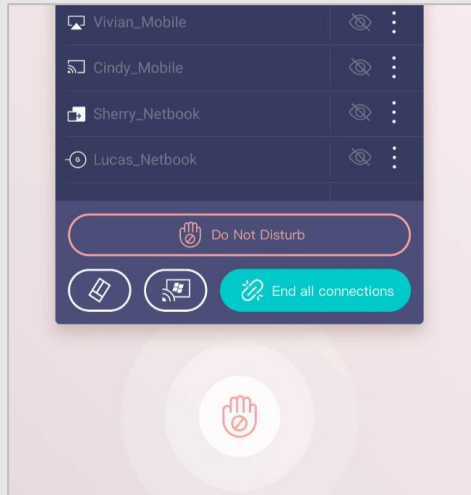

▲ Do not disturb mode

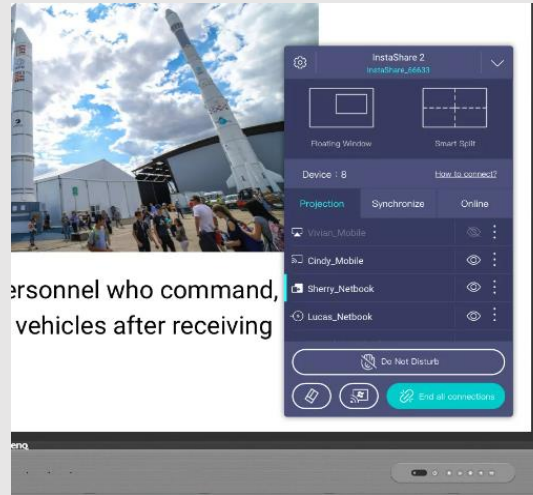

▲ Control from Display

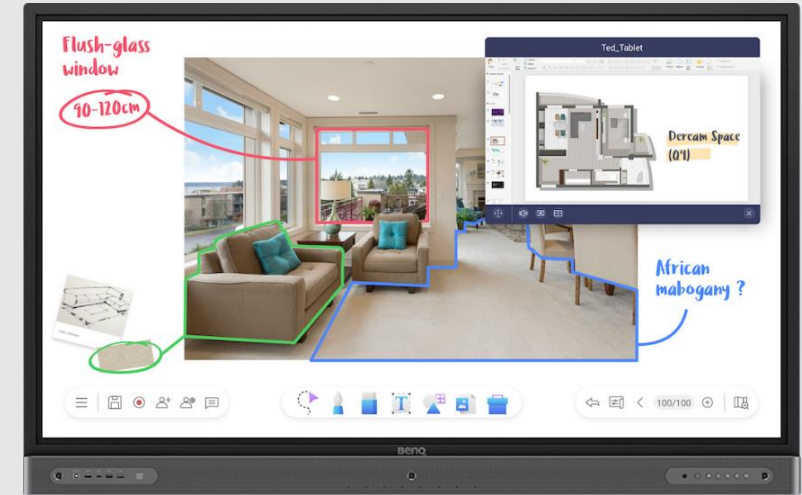

▲ Floating windows


InstaShare 2

- ✓ InstaShare Button for **casting only**
- ✓ Do not disturb mode
- ✓ Control from Display
- ✓ Floating windows" Function
- ✓ Native casting protocols (Airplay, Chromecast...)


InstaShare Button Mode

- ✗ Not available (no icon on the OSD menu)


After you enable the Button Mode?

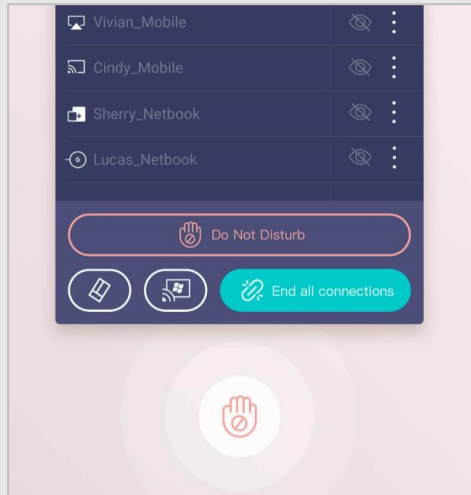

▲ Do not disturb mode

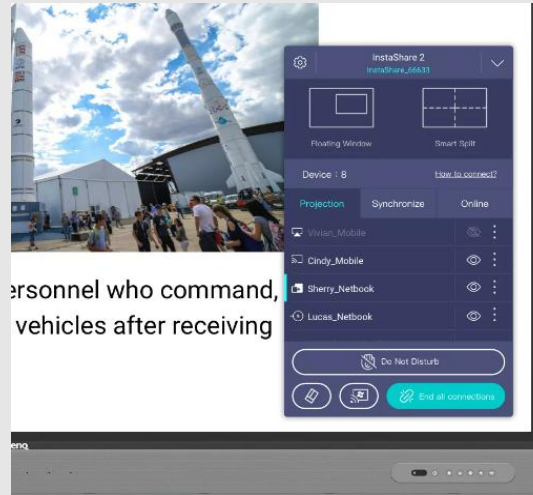

▲ Control from Display

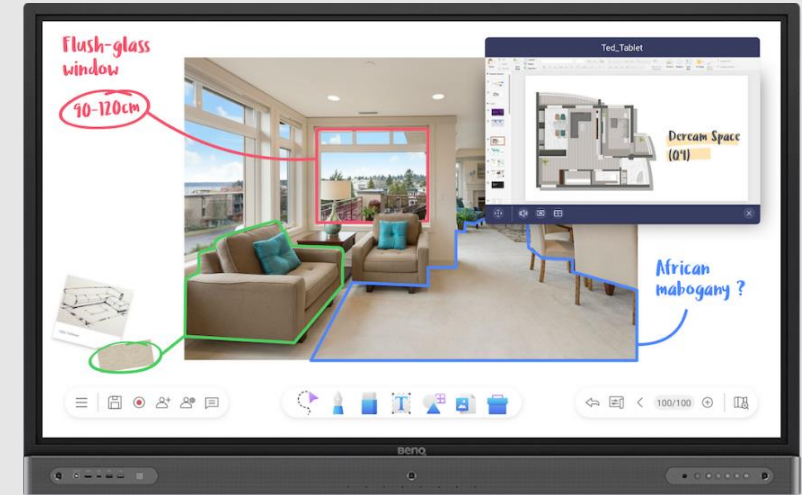

▲ Floating windows

InstaShare 2

- ✗ InstaShare Button
- ✓ Do not disturb mode
- ✓ Control from Display
- ✓ Floating windows" Function
- ✓ Native casting protocols (Airplay, Chromecast...)

InstaShare Button Mode

- ✓ InstaShare Button for **casting and BYOM**
- ✗ Do not disturb mode
- ✗ Control form Display
- ✗ Floating windows" Function
- ✗ Native casting protocols (Airplay, Chromecast...)

Thank you